

How to Operate the Heater

- ✓ **Ensure the power is connected and turned on (ie; is it plugged in and turned on?)**
- ✓ **Press the STANDBY/ON button once to begin the ignition sequence.**
- ✓ **When the ignition sequence is started the light next to the STANDBY/ON button will glow GREEN and the combustion fan will purge the combustion chamber.**
- ✓ **Once purged, the burner ignition will take 5 – 10 seconds and the light will change to RED (steady) after the ignition has been achieved.**
- ✓ **After ignition the appliance will begin to operate in the factory present manner.**
- ✓ **The temperature display will show the room temperature CURR and the default set temperature SET**
- ✓ **To adjust the set temperature, use the Up and Down buttons (above and below the STANDBY/ON button.**
- ✓ **To turn the heater off while it is in operation press the STANDBY/ON button once.**
- ✓ **After the light has gone out, the fan will continue to cycle for several minutes. This is to lower the temperature within the heater and is normal. DO NOT disconnect the power at this time.**